

FMEA
EMU FAILURE MODE, EFFECT ANALYSIS

01/02/90 SUPERSEDED / /

ANALYSE:

NAME P/N QTY	FUNCTION	FAILURE MODE & CAUSES	MISSION PHASE	FAILURE EFFECT	FAILURE DETECTION FLIGHT/GROUND	TIME TO EFFECT/ ACTIONS	CRT	REMARKS/ HAZARD	REF
ELECTRICAL SIGNALS HARNESS, ITEM 152 BY2B0152-9 (1)	Electrically connects the BCB to the DME to provide status input signals, digital display signals, +5V, +10V and +/-14.2V power, RTRU signals, motor tact signal. Electrically connects the BCB to the EVC to provide connections for hardline signals, mic signals, mic power, earphone signals, and ECB signals.	IS2FH07: Electrical open or short, battery current sensor (HI) or (LO) lines. CAUSES: Cable chafing against connector shell or shield. Improper connector strain relief. Faulty connection between the connector and the lead wires.	PREEVA EVA	END ITEMS: Open or short from battery current sensor (HI) or (LO) Lines. GFE INTERFACES: Inaccurate low current reading and amp hour consumable calculation. Loss of battery power monitoring and battery current sensing. If a subsequent short occurred, no warning message would be issued. MISSION: None for single failure. terminates EVA with loss of power.	FLIGHT: Yes. Detected in "Status" check. Battery current will show zero amps. GROUND: Yes. FERU-A-001, REMIJAED; Proc. 7.3.5.2.4.5, N/A EMU Vacuum Performance, Chamber Run Matrix, DDN Display Verification.	TIME AVAILABLE: N/A	S/IR A-PASS B-PASS C-PASS	Redundant paths are the battery and the SOP.	None.
				CREW/VEHICLE: None for single or double failure. Possible loss of crewman with loss of SOP.					

50402258
ATTACHMENT -
PAGE 16 OF 30

SPM-43-001
PAGE 740